

Quick Start

Digital Oscilloscope

v1.0

Safety Requirement

General Safety Summary

Carefully read the following safety precautions to avoid person injury and prevent damage to the instrument and any products connected to it. To avoid potential hazards, please use the instrument as specified.

Only qualified technician should perform service procedures

To Avoid Fire or Personal Injure

Use Proper Power Line

Use only the special power line of the instrument which is approved by local state.

Ground the Instrument

The instrument grounds through the protective terra conductor of the power line. To avoid electric shock, the ground conductor must be connected to the earth. Make sure the instrument is grounded correctly before connecting its input or output terminals.

Connect the Signal Wire Correctly

The potential of the signal wire is equal to the earth, so do not connect the signal wire to a high voltage. Do not touch the exposed contacts or components.

Look Over All Terminals' Ratings

To avoid fire or electric shock, please look over all ratings and sign instruction of the instrument. Before connecting the instrument, please read the manual carefully to gain more information about the ratings.

Do not Operate with Suspected Failures

If you suspect that there is a damage of the instrument, please let a qualified service personnel check it.

Avoid Circuit or Components Exposed

Do not touch exposed contacts or components when the power is on.

Do not operate in wet/damp conditions

Do not operate in an explosive atmosphere

Keep the surface of the instrument clean and dry

Safety Terms and Symbols

Terms on the product. These terms may appear on the product:

DANGER: Indicates direct injuries or hazards that may happen.

WARNING: Indicates potential injuries or hazards that may happen.

CAUTION: Indicates potential damages to the instrument or other property that may happen.

Symbols on the product. These symbols may appear on the product:



**Hazardous
Voltage**



**Protective
Earth Ground**



Warning



Earth Ground



**Power
Switch**

General Care and Cleaning

Care:

Do not store or leave the instrument in direct sunshine for long periods of time.

Notice:

- To avoid damages to the instrument or probe, please do not leave them in fog, liquid, or solvent.

Cleaning:

Please perform the following steps to clean the instrument and probe regularly according to its operating conditions.

1. Disconnect the instrument from all power sources, and then clean it with a soft wet cloth.
2. Clean the loose dust on the outside of the instrument and probe with a soft cloth. When cleaning the LCD, take care to avoid scarifying it.

Notice:

- To avoid damages to the surface of the instrument and probe, please do not use any corrosive liquid or chemical cleanser.
- Make sure that the instrument is completely dry before restarting it to avoid short circuits or personal injuries.

Contents

Safety Requirement	I
General Safety Summary.....	I
Safety Terms and Symbols	II
General Care and Cleaning.....	III
Quick start.....	1
General Inspection.....	1
Adjust the Supporting Legs.....	3
Connect to AC Power Supply	4
Power-on Inspection.....	5
Connect the Probe.....	6
Function Inspection.....	7
Probe Compensation.....	8
The Rear Panel.....	12
Function Introduction of Front Panel.....	14
Vertical Control	14
Horizontal Control.....	16
Trigger Control.....	17
RUN/STOP.....	18
SINGLE	18
AUTO.....	18
Universal Knob	19
Function Menus.....	20
DEFAULT SETUP	21
HELP Information	21
PRINT	21
User Interface.....	22
Using Security Lock.....	25

Quick start

General Inspection

1. Inspect the shipping container.

Keep the damaged shipping container or cushioning material until the contents of the shipment have been completely checked and the instrument has passed both electrical and mechanical tests.

The consigner or carrier will be responsible for damages to the instrument resulting from shipment. The manufacturer would not provide free maintenance or replacement.

2. Inspect the instrument.

If there are instruments found damaged, defective or failure in electrical and mechanical tests, please contact your sales representative.

3. Check the accessories.

Please check the accessories according to the packing list. If the accessories are incomplete or damaged, please contact your sales representative.

Appearance and Dimension

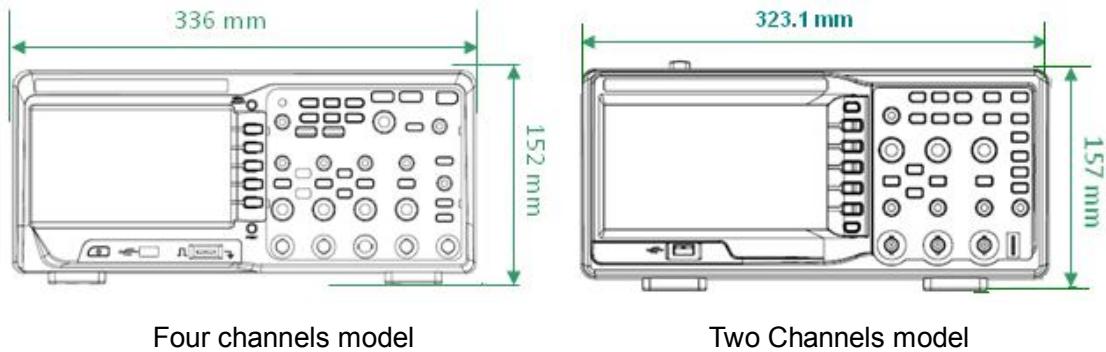


Figure 1 Front View

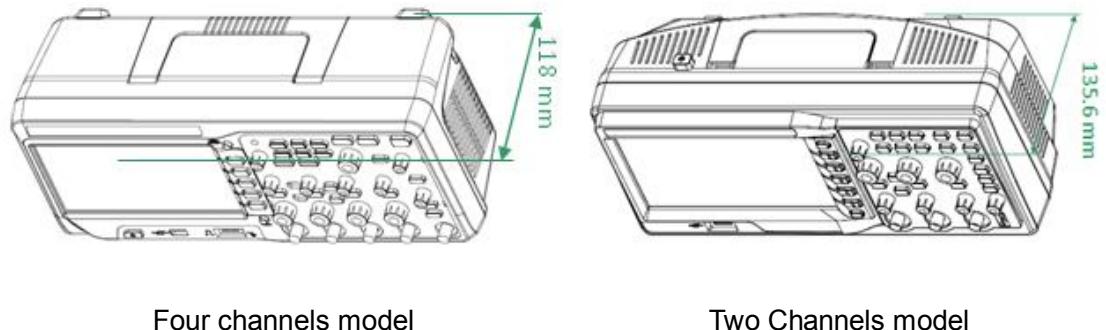


Figure 2 Side View

Adjust the Supporting Legs

Adjust the supporting legs properly to use them as stands to tilt the oscilloscope upwards for stable placement as well as easier operation and observation of the instrument.


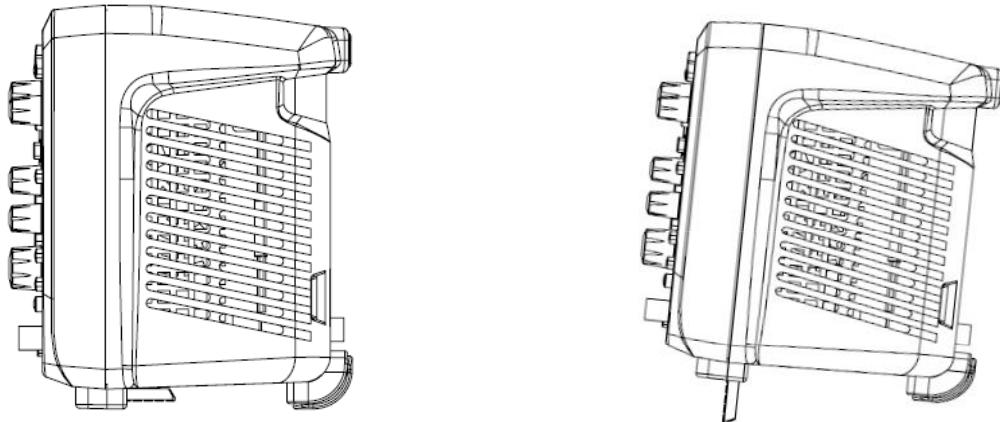



Figure 3 Adjust the Supporting Legs

Connect to AC Power Supply

The oscilloscope accept 100-240V, 45-440Hz AC power supply. Please use the power cord provided as accessories to connect the instrument to the power source as shown in the figure below.

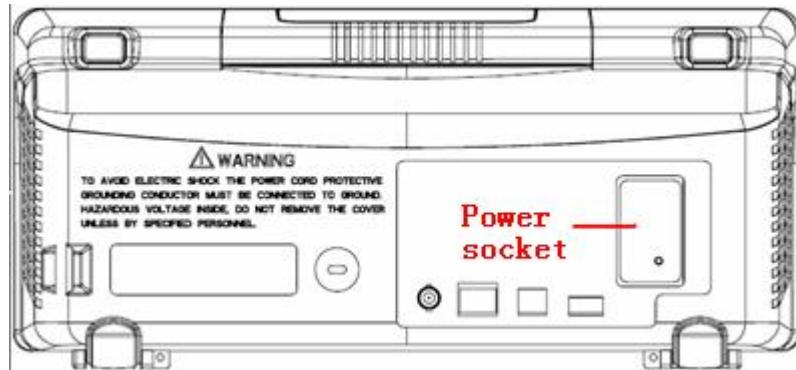

Four channels model

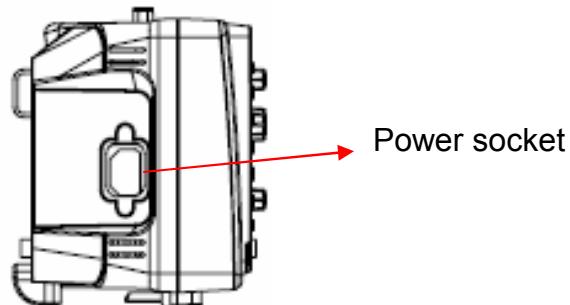

Two Channels model

Note: In want of replacing the fuse, please return the instrument to the factory that produced it to have it repaired by qualified service personnel authorized by the manufacturer.

Power-on Inspection

When the scope is energized, turn on the power switch at the rear panel first, and then press the power button on the front panel to boot up the scope. During the start-up progress, the instrument performs a series of self-test items and you can hear the sound of relay switching. After the self-test completed, the welcome interface displays immediately.


Connect the Probe

The manufacturer provides passive probes for digital oscilloscope. Please refer to corresponding *Probe User Manual* for detailed technical information. The following are the probes specified for this oscilloscope.

Type	Description
PB470	70 MHz, passive probe
PP510	100 MHz, passive probe
PP215	150 MHz, passive probe
PP420	200 MHz, passive probe
PP430	300 MHz, passive probe

Connect the probe:

1. Connect the BNC terminal of the probe to one of the channel BNC connector of the front panel.
2. Connect the probe tip to the circuit point which is to be tested and the ground alligator clip of the probe to the ground terminal of the circuit.

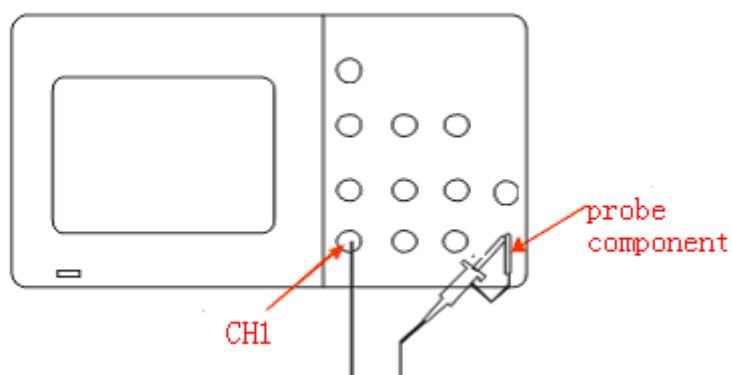


Function Inspection

1. Press **DEFAULT SETUP** to restore the oscilloscope to its default setup.
2. Connect the ground alligator clip of the probe to the Ground Terminal on the front panel.
3. Use the probe to connect the CH1 Input Terminal and the Compensation Signal Output Terminal on the front panel.



4. Press "AUTO".
5. Observe the waveform on the screen. In normal condition, the display should be a square waveform as shown in the below:

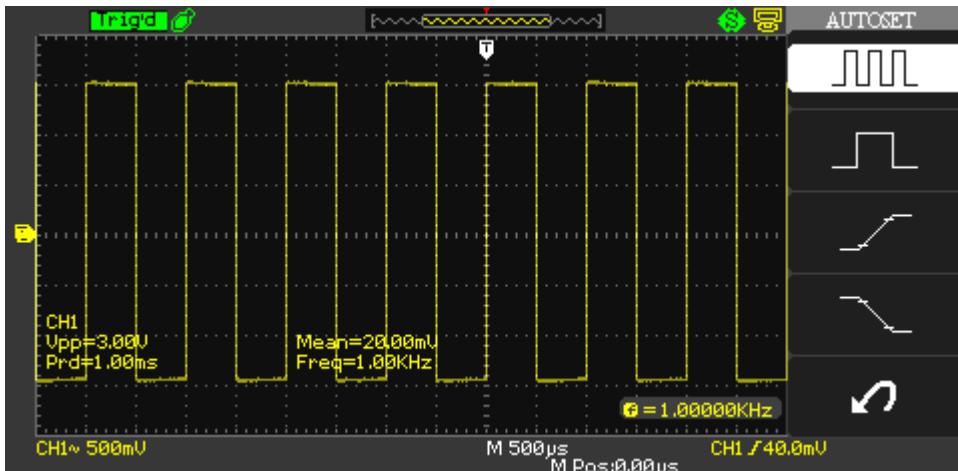


6. Test the other channels in the same method. If the actual square waveforms does not match that in the figure above, please perform "Probe Compensation".

Note: To avoid electric shock when using the probe, please firstly make sure that the insulated wire of the probe is in good condition, and do not touch the metallic part of the probe when it is connected to a high voltage.

Probe Compensation


You should properly compensate the probe at first use of it. Non-compensated or inadequate compensated probe may cause inaccurate measurement. The following steps are about probe compensation:

1. Perform step 1, 2 , 3 and 4 of “Function Inspection”
2. Check the displayed waveforms and compare them with the following figure.

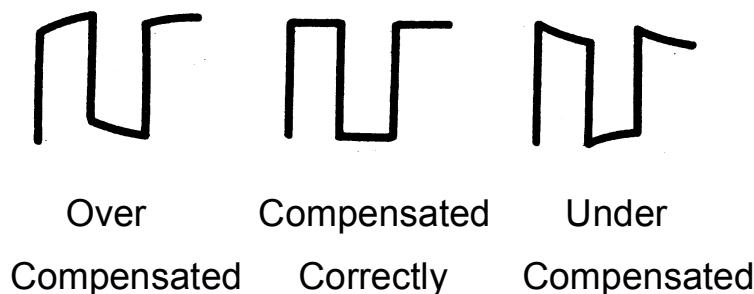


3. Use a nonmetallic driver to adjust the low-frequency compensation adjustment hole on the probe until the waveform changees to be correct as the figure above.

The Front Panel

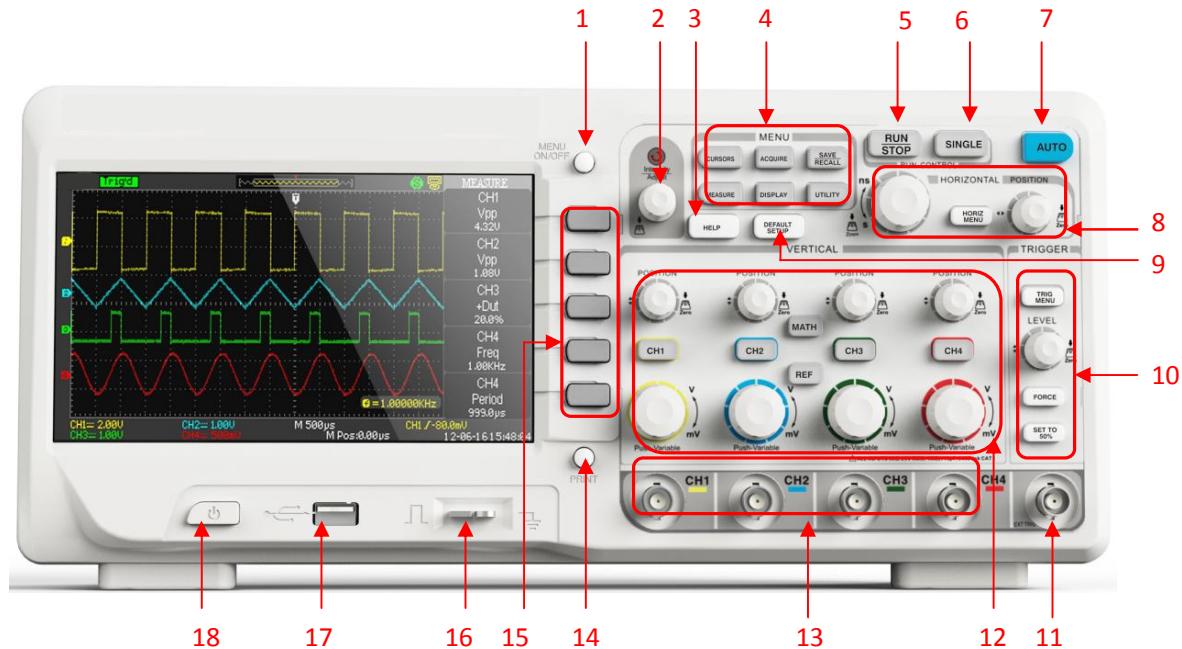


Four channels model

No.	Description	No.	Description
1	Menus On/Off	10	Trigger Control Area
2	Universal Knob	11	EXT TRIG Terminal
3	Help	12	Vertical Control Area
4	Function Menus	13	Channel Input Terminal
5	Run/Stop	14	Print Key
6	Single	15	Menu Select keys
7	AUTO	16	Probe Compensation
8	Horizontal Control Area	17	USB Host Interface
9	Default Setup	18	Power On/Off

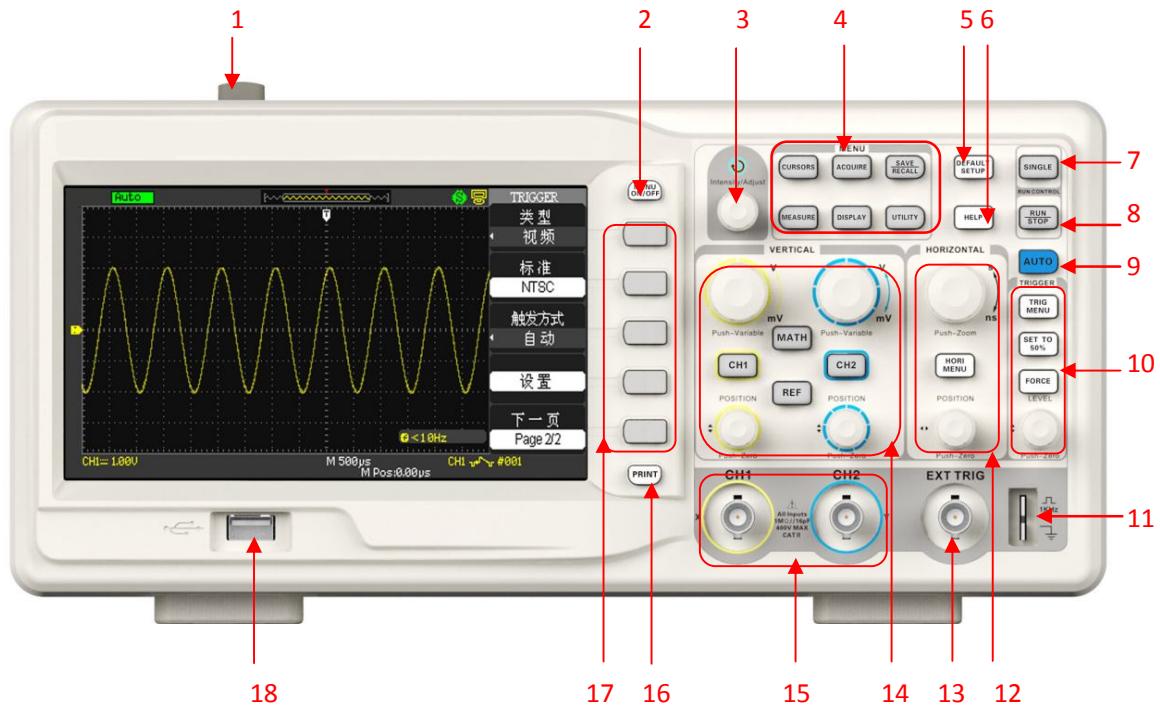

Two channels model (7" display screen)

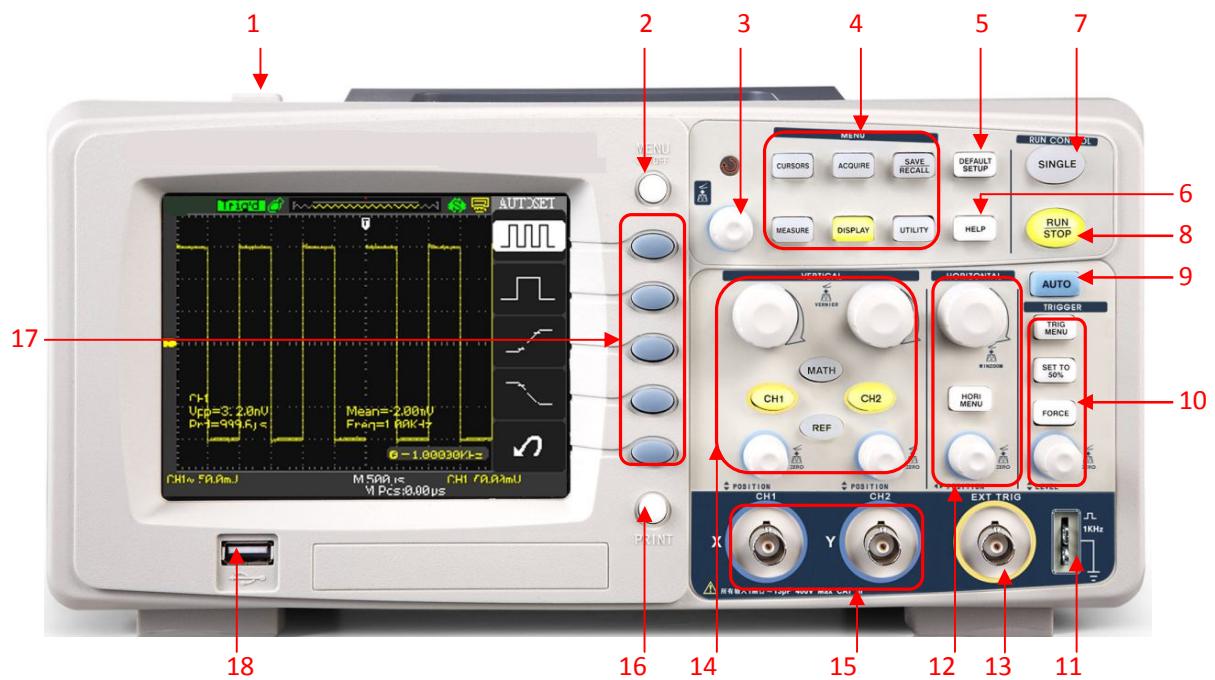


Two channels model (5.7" display screen)


Two channels model

No.	Description	No.	Description
1	Power On/Off	10	Trigger Control Area
2	Menus On/Off	11	Probe Compensation
3	Universal Knob	12	Horizontal Control Area
4	Function Menus	13	EXT TRIG Terminal
5	Default Setup	14	Vertical Control Area
6	Help	15	Channel Input Terminal
7	Single	16	Menu Select keys
8	Run/Stop	17	Print Key
9	AUTO	18	USB Host Interface

The Rear Panel

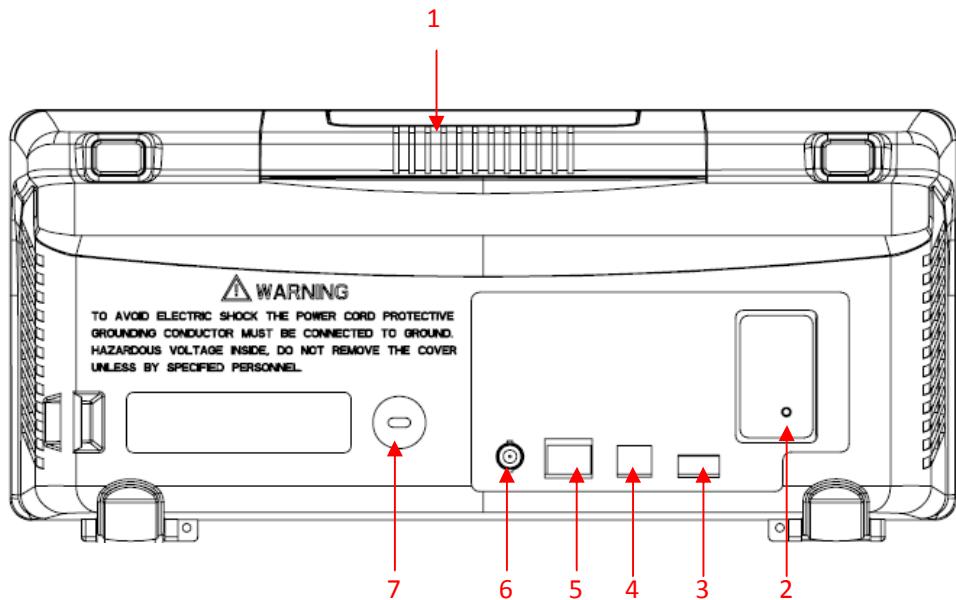

Four channels model

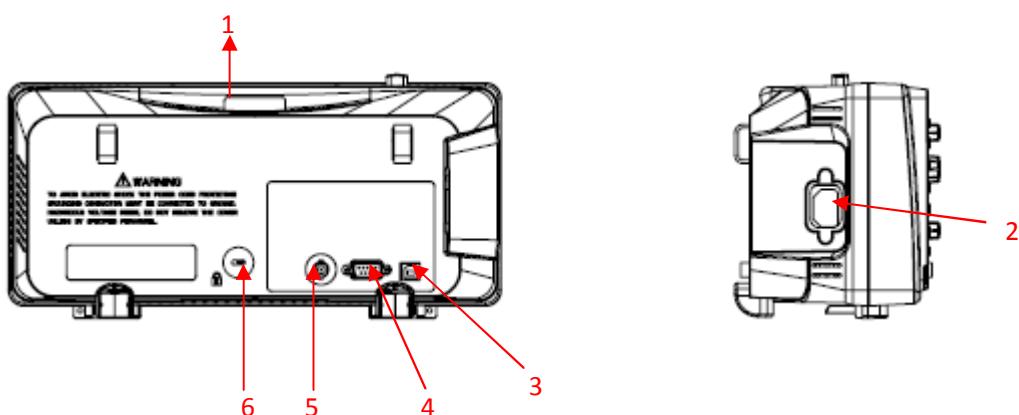

Two channels model

1. Handle

Pull up the handle vertically for easy carrying; press it down if you do not need the handle.

2. AC Power Input Terminal

The power available of the oscilloscope is 100~240V, 45~440Hz. Please use the power cord provided as accessories to connect the instrument to AC power.

3. USB Host Interface(Only for Four channels model)

Use U disk to save the setup file, waveforms file, csv file and BMP file.

4. USB Device Interface

PictBridge printer or PC can be connected via this interface to print the current interface of the oscilloscope or control the instrument through PC software.

5. LAN Port

PC can be connected via this interface to control the instrument through PC software.

6. Pass/Fail Output Terminal


The pass/Fail testing pulse are put out via this terminal.

7. Lock hole

You could lock the instrument in a fixed location using a security lock (please buy it yourself) via the lock hole.

Function Introduction of Front Panel

Vertical Control

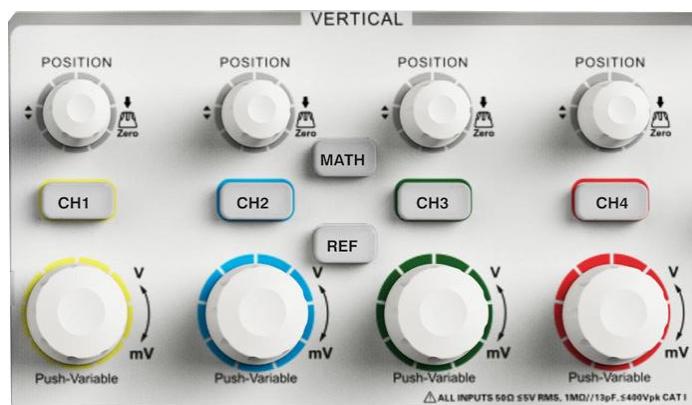

Four channels model



Two channels model

CH1 **CH2** **CH3** **CH4** : Input channels. These four channels are marked with different colors to distinguish different input channels and their waveforms. Press the channel button will turn on the corresponding channel as well as its menu, and press it twice continuously will turn off the channel.

MATH : Press the button to open corresponding math menu under which the operation of adding, subtracting, multiplying, dividing and FFT could be performed.

REF : Press the button to enable the reference waveform function, thus to compare the current waveform with the reference waveform to decide circuit failures.



: Modify the vertical position of current waveform. Turn clockwise to increase the position while turn counterclockwise to decrease. The waveform will move up and down and the position message at the lower-left corner of the screen will change along. Press down the knob to quickly reset the vertical position to zero.



: Modify the vertical scale of the current channel. Turn clockwise to decrease the scale while turn counterclockwise to increase. The amplitude of the waveform will enlarge or reduce and the scale message at the lower-left corner of the screen will also change as the scale changes. Press down the knob to quickly switch the vertical scale adjustment modes between “Coarse” and “Fine”.

Horizontal Control



Four channels model



Two channels model

HORIZ MENU : Press the button to open horizontal control menu under which you can turn on/off the delay sweep function.



: Modify the trigger position. The trigger point will move left or right relative to the center of the screen when you revolve the knob. The waveform will move left or right and the trigger position message at the lower-left corner of the screen will also change as the position changes. Press the knob to quickly reset the trigger position to zero.




: Modify the horizontal time base. Turn it clockwise or counterclockwise to reduce or increase the time base. The waveform will display expanded or compressed and the time base message at the nether side of the screen will change as the time base changes. Press down the knob to quickly switch to the delay sweep state.

Trigger Control



Four channels model

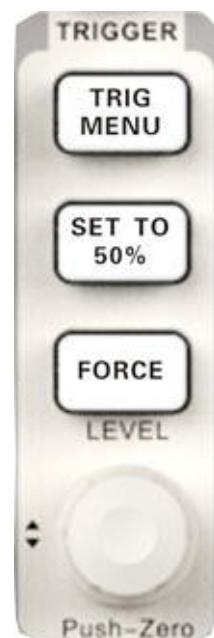

Two channels model

TRIG MENU : Press the button to open trigger menu under which five trigger modes are supported.

SET TO 50% : Press the button to set trigger level to the middle of the maximal voltage and the minimal voltage to quickly stabilize the current waveform.

FORCE : Press the button to make the signal trigger forcefully.

LEVEL : Modify the trigger level. Turn it clockwise or counterclockwise to increase or decrease the level. The trigger level will move up or down and the value in the message box at the lower-left corner of the screen will change as the trigger level changes. Press it down to reset the trigger level to zero point.

RUN/STOP

 : Press the button to set the state of the instrument to “RUN” or “STOP”.

When in “RUN”, the indicator light displays yellow;

When in “STOP”, it displays red.

SINGLE

 : Press the button to turn the trigger mode to “Single”.

AUTO

 : Press the button to enable the waveform auto setting function. The oscilloscope will automatically adjust the horizontal time base, vertical scale and trigger mode according to the input signal to make the waveform displays in a perfect state.


Universal Knob



Adjust waveform brightness: While the light above the knob is dark, revolving the knob will adjust the brightness of the waveform, which ranges from 30% to 100%. Turning clockwise means increase while counterclockwise means decrease. You can also select “intensity” in “DISPLAY” menu and then revolve the knob to adjust the brightness of the waveform.

Universal knob: When the light above the knob is lighted, you could revolve the knob to select between submenus under the current menu and press it down to select the current submenu. In addition, it can also be used to modify parameters and input filename.

Function Menus

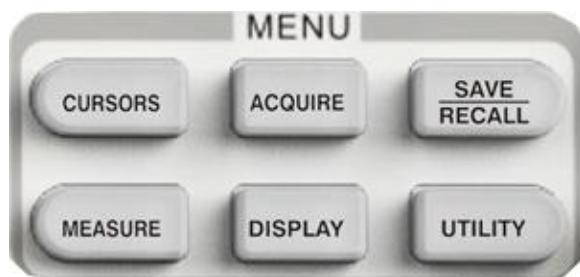

CURSORS : Press the button to enter the cursor measurement function menu. The instrument provides three measure modes: Manual measurement, Track measurement and Auto measurement.

ACQUIRE : Press the button to enter the acquire function menu under which you could set the acquisition mode, sampling mode and dot inserting mode.

**SAVE
RECALL** : Press the button to enter the file save and recall function menu. There are four types of file to be saved which are respectively setups waveforms, picture and CSV, and additionally the factory setup are supported.

MEASURE : Press the button to enter the measurement function menu. There are three measure types: voltage, time and delay. Each kind of them contains many submenus, you could press any of them to display the corresponding value.

DISPLAY : Press the button to enter the display function menu under which you could set waveform display type, persist time, waveform brightness, display format, menu display and so on.

UTILITY : Press the button to enter the utility function menu under which you could set the corresponding function of the system and some parameters like Sound, Language, Interface and so on. In addition, some advanced functions are also supported such as Self Calibration, Firmware Update, Pass/Fail test and so on.

DEFAULT SETUP

DEFAULT SETUP Press the button to enter default setup function menu of the system. The default voltage scale and time base are respectively 1v/div and 500us.


HELP Information

HELP : Press the button to enable HELP function, and then press down any menu to display corresponding help information. To display the submenus help information of the current menu, firstly you should open the current menu, and then press down the “HELP” button, the last step is to select any submenu you want.

PRINT

PRINT : Press the button to enable print function. If the instrument is connected to a printer which is usable, press it to perform print function.

User Interface

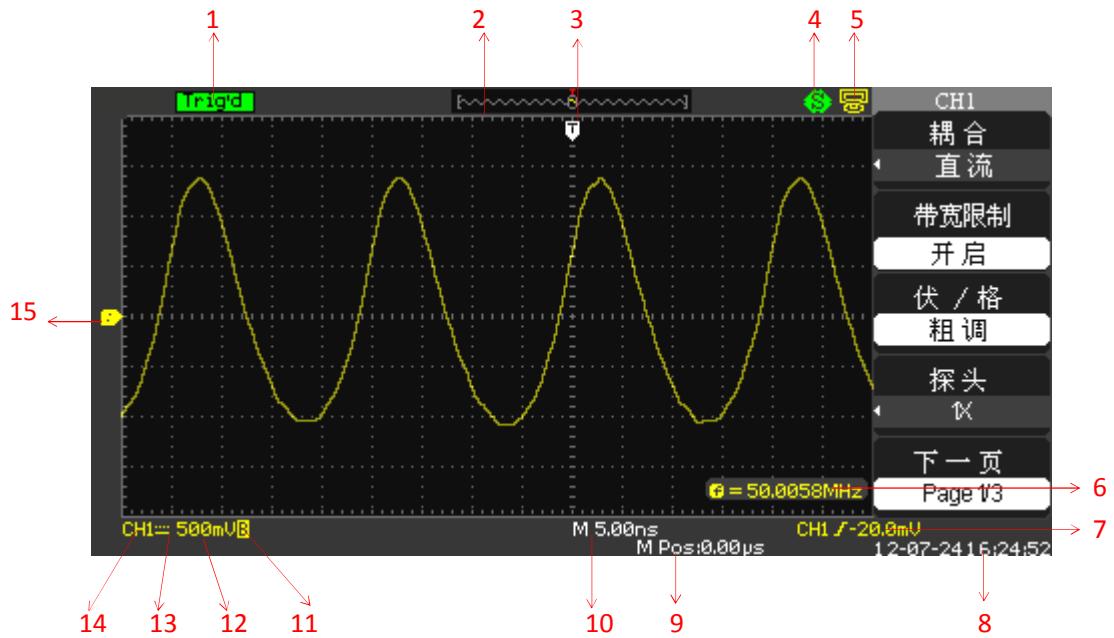

Four channels model

1. Working state

Available working states include Ready、Auto、Trig'd、Scan and Stop.

2. Waveform memory

Display the position of the current waveform in the memory of the oscilloscope.

3. Trigger position

Display the trigger position of the waveform in the memory and on the screen.

4. Print

Display the current state of “Print Key” under the menu of “Print Setup”.

P: “Print Key” option set to “Print Picture”;

S: “Print Key” option set to “Save Picture”.

5. Back USB Device

“Back USB” supports two types of interface: USBTMC and Printer.

6. Frequency Counter

Display the firmware frequency of current waveform. To display it, you should turn on the “Counter” in menu of “UTILITY”.

7. Trigger Setting

- **Trigger Level.** Display the position of the current trigger level, for example: **CH1 / 640mV**;
- **Trigger Type.** Display the current trigger type and trigger condition. Different trigger types have different marks, for example: **/** means triggered on Slop side in edge trigger.

8. Date and Time

Display the current date and time

9. Trigger Position

Use **HORIZONTAL POSITION Knob** to modify the parameter. Turn clockwise or counterclockwise to make the red arrowhead move right or left, which will respectively cause the decrease and increase of the parameter in the message box at the lower-left corner of the screen. Press down the knob to automatically reset the parameter to zero as well as make the red arrowhead return to its initial position.

10. Horizontal Time Base

Represent the time of each grid on the horizontal axis of the screen. You could revolve **HORIZONTAL SCALE Knob** to modify the parameter which is variable from 1nS to 50S.

11. BW Limit

If the current “BW Limit” is “On”, then the mark **B** displays at the lower-corner of the screen, or nothing displays. When the vertical scale is 2mV/div, the “BW Limit” turns on automatically.

12. Voltage Scale

Represent the voltage value of each grid on the vertical axis of the screen. You could revolve **VOLTAGE SCALE Knob** to modify the parameter which is variable from 2mV to 5V.

13. Coupling Mode


The oscilloscope supports three coupling mode: DC, AC and GND, each of them has unique mark displaying on the screen.

14. Current Channel


Display the current working channel. All channels can display at the same time.

15. Trigger Level

Display the position of the trigger level. Turn the knob clockwise or counterclockwise to make the trigger level move up or down

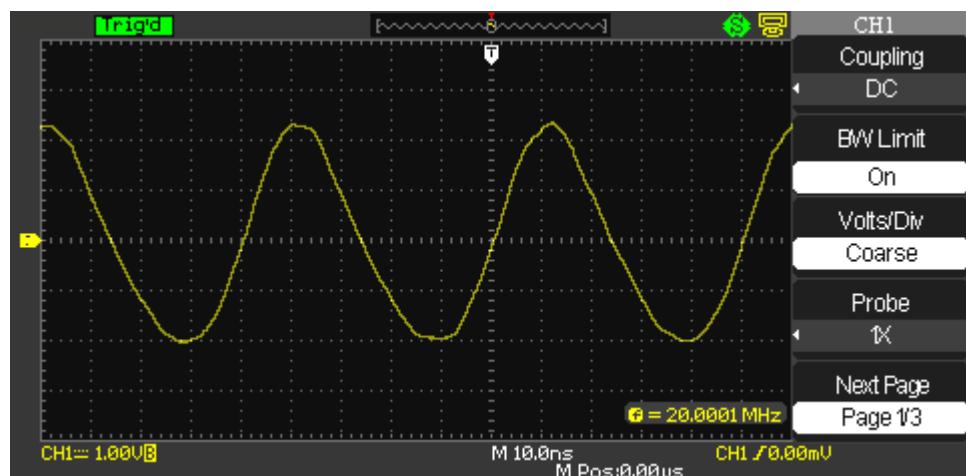

Two channels model(7" display screen)

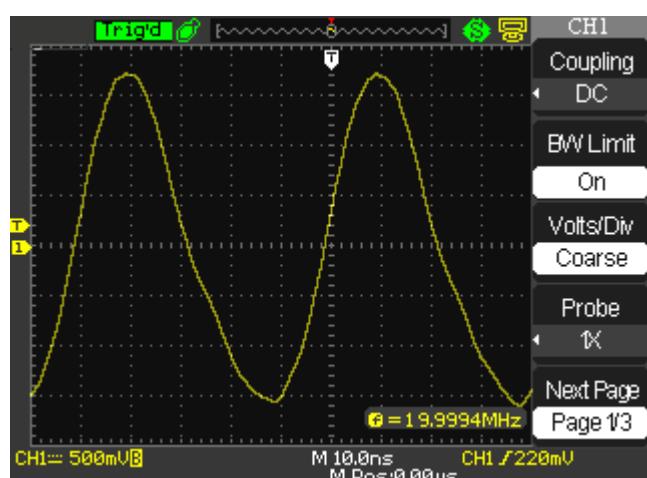

Two channels model(5.7" display screen)

Using Security Lock

If needed, you could use the security lock (please buy it yourself) to lock the instrument in a fixed location. The method: align the lock with the lock hole and plug it into the lock hole vertically, turn the key clockwise to lock the instrument and then pull the key out.

